


Taking Digital Photos With a Sony Mavica Camera

Disks


Disks are formatted for use with Windows computers. Windows or Macintosh, can read the images from these disks.

Images are stored in the industry standard JPEG file format.

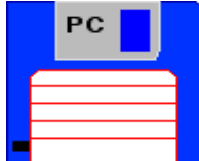

Taking Photos

1. Remove the lens cap.
2. Slide the POWER button down to turn on the camera.
3. Make sure the setting is STILL.
4. Locate the disk drive OPEN button. Slide the OPEN button down. The door will open.
5. Insert the floppy until you hear it click.
6. Locate the silver-round button on the front of the camera. It is called the shutter button.
7. Press the shutter button halfway down (You are focusing). You will see a green light.
8. Press the shutter button fully down. The image is being recorded on the disk.

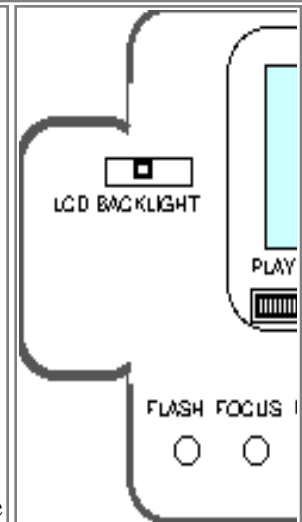

Use the **Menu** (big round) button to make selections. The arrows move **up, left, right** and **down**. Press the middle of the button to **Enter**.

PLAY (the MENU items below are available when you are in the PLAY mode)

The top button activates the MENU



INDEX	DELETE	FILE	TOOL	SETUP
SHOW all your photos and select from thumbnails.	DELETE photos	DISK TOOL allows you to format a disk in the camera SLIDE SHOW allows you to display photos as a slide show	COPY or RESIZE photos in here	Control brightness of the LCD display here. This allows you to see your subject more clearly but doesn't affect the brightness of the actual photo. CLOCK SET

Press the DISPLAY button to turn the MENU off.

STILL (the MENU items below are available when you are in the STILL mode)

The top button activates the MENU



SELF TIMER	EFFECT	FILE	CAMERA	SETUP
Select and then press the shutter button. You have 10 seconds!	Solarize, Black&White, Sepia, Negative Art--Artsy Stuff!	<p>DISK TOOL in this menu will allow you to format a disk in the camera</p> <p>IMAGE SIZE allows you to change the size.</p> <p>REC MODE allows you to switch from normal to E-Mail mode.(E-Mail mode records a smaller JPEG compressed file suitable for e-mail transmissions.)</p>	Make EXPOSURE , FLASH LEVEL and SHARPNESS changes here.	You can control brightness of the LCD display here. This allows you to see your subject more clearly but doesn't affect the brightness of the actual photo.

Press the **DISPLAY** button to turn the **MENU** off.

Button Functions

<p>FLASH Flash button AUTO is the default. Each time you press the button, the flash mode changes from forced flash to no flash, back to AUTO. In AUTO mode, the flash goes off automatically according to the brightness of the surroundings.</p>	<p>FOCUS Allows for different focus modes.</p>	<p>PROGRAM AE MODE (Press the PROGRAM button repeatedly to get the options--landscape, twilight, etc.)</p>	<p>DISPLAY Shows options you have chosen and time remaining on battery and number of photos on floppy.</p>
--	---	--	---

Other Controls:

ZOOM "T" side: for telephoto (subject appears closer) "W" side: for wide-angle (subject appears farther away)

Save photos from the floppy to your computer.	Rename photos by clicking on the original name and typing a new one. Keep the JPG extension!	File >Insert to use photos in ClarisWorks, Word, Power Point, or Inspiration. File >Add Clip art to use in HyperStudio.
--	---	---

Susan Monahan, AISD Instructional Technology